

MANUAL GRIPFACTORY MICROGRIP TILES

ATTENTION: The room must be well ventilated.

ATTENTION: Read the safety data sheet before starting.

TOOLS REQUIRED:

- Personal protective equipment (protective gloves and panoramic glasses)
- Watering can, brush, vacuum cleaner and / or floor cleaner
- Pressure sprayer with GripFactory MicroGrip Tiles (anti-slip liquid for ceramic tiles)
- GripFactory MicroGrip Cleaner (cleaning agent)

UITVOERING:

- Clean the floor with MicroGrip Cleaner (see manual MicroGrip Cleaner).
- Spread the MicroGrip with the pressure spray evenly over the floor so that everything is touched.
- Allow the MicroGrip to work in for around 30-45 minutes without the floor drying. If there are dry spots, spread the liquid with the brush or spray the liquid.
- Test after 30 minutes with shoe or brush whether the floor's roughness is sufficient. For a higher skid resistance, let the liquid work in even longer.
- If the floor is sufficiently rough, neutralize with water and scrub the floor thoroughly.
- Dry the floor afterwards with the vacuum cleaner or floor extractor.

TIPS:

- Always first make a test surface out of sight so that the effect of the anti-slip treatment is known.
- Beware of dark floors because of the "whitening" effect.
- Make sure the floor heating is off and prevent drafts as much as possible.
- Never treat more than 100 m2 per session to achieve the correct skid resistance everywhere.



GripFactory B.V.

Trasmolenlaan 12
3447 GZ Woerden
The Netherlands

☎ +31 (0)348 - 20 30 00

✉ info@gripfactory.nl

🌐 www.gripfactoryantislip.com

GRIPFACTORY APPLICATION SERVICE

Problems, issues? Then contact the GripFactory Service Desk (+31 348-203000). For an additional cost you can have GripFactory MicroGrip applied by a certified applicator.