

USER MANUAL GRIPFACTORY SANIGRIP

ATTENTION: The room must be well ventilated.

ATTENTION: Put a waterproof bag around any faucets / shower heads that are above the surface to be treated.

1. CLEANING


Clean the surface thoroughly with water and wipe it dry properly.

2. DECREASING

Remove the cloth and degreaser from the packaging and degreases the surface. Then dry the substrate using a clean cloth or paper towel.

3. MASKING

With the included adhesive tape, you can now masking the surface. This can be done in different ways.

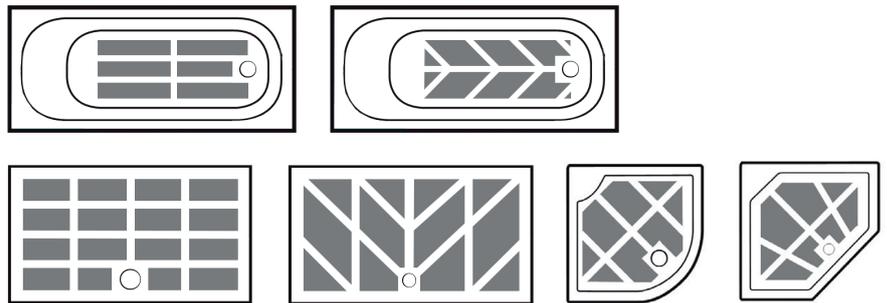

4. MIX

Now take the included can (component 1) and the brown bottle (component 2). Open the can and empty the brown bottle into the can. Then use the enclosed wooden stick to stir for 1 minute very well with the components.

5. APPLICATION

Put the mixture into the paint tray and apply it with the supplied paint roller evenly on the surface (point 3).

6. READY!

Finally, remove the adhesive tape and let it dry for at least 24 hours. After 24 hours, the surface is ready to be used again.



GripFactory B.V.

Industrieweg 4 H
3442 AE Woerden
The Netherlands

+31 (0)348 - 20 30 00
info@gripfactory.nl
www.gripfactoryantislip.com

GRIPFACTORY APPLICATION SERVICE

Are you unable to resolve it? Please contact the GripFactory Service Desk (+31 348 203000). At an additional cost you can have GripFactory SaniGrip applied by a certified applicator.