

INSTALLATION INSTRUCTIONS WOOD

GripFactory PolyGrip Decking Strips

Welcome as a customer of GripFactory. To ensure that the PolyGrip Decking Strips are applied and mounted correctly, we advise you to carefully read the information below.


The mounting method and products described in this document have been extensively tested and applied in practice. However, GripFactory cannot be held liable for any problems with the application. All application is at your own risk.

Products from the GripFactory PolyGrip range can be mounted on various surfaces. In this manual, we provide a comprehensive overview of the steps you must take to apply PolyGrip decking strips on wood (decking) for an optimal and durable end result.

1. BEFORE YOU START

Check whether the PolyGrip product is suitable for the surface. PolyGrip Decking Strips from GripFactory can be mounted on wood. If in doubt, you can always contact our Service Desk.

When sawing and installing the PolyGrip Decking Strips, the correct protective equipment must be worn. For example, gloves, glasses, dust mask, safety shoes and a suitable coverall.

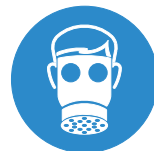

Make sure that the surface on which you want to apply the PolyGrip decking strips is clean, dry and free from grease, moss, mold, etc. All loose and damaged areas should be repaired until the area to be worked is flat.

REMARKS:

If it is determined that the wood has rotten spots, this must be replaced. Before mounting, lay down the PolyGrip Decking Strips to ensure that it fits evenly.


2. SAWING

GripFactory supplies the PolyGrip Decking Strips to size, but sometimes it is necessary to saw on site to get a good fit. Sawing should be performed in a safe environment.


Sawing can be carried out, among other things, with an angle grinder fitted with a suitable disc (preferably with diamond) or a jigsaw fitted with a tile or metal saw. If you foresee that many sawing operations have to be performed, we advise you to use our sawing service or to use a water-cooled saw with diamond

GripFactory B.V.

Industrieweg 4 H
3442 AE Woerden
The Netherlands

 +31 (0)348 - 20 30 00

 info@gripfactory.nl

 www.gripfactoryantislip.com

disc. The PolyGrip DeckingStrips are made of glass fiber reinforced polyester and finished with an aluminum oxide grain. Wear of your saw blade will occur quickly due to the hardness of the product.

3. WASTE

You must ensure that waste is properly processed. Look at the product packaging for more information or contact the GripFactory Service Desk.

4. MOUNTING ON WOOD



Tools:

- ☑ Wire brush
- ☑ Remover 16 Spray / degreaser (approximately 7.5 m² per 500 ml)
- ☑ Cordless drill
- ☑ Industrial vacuum cleaner (optional)
- ☑ Stainless steel screws with a flat head

Step 1: Preparation

Make sure that the surface to be treated is clean, free of grease and dust and that all moss and mold have been removed. If applicable, remove green deposits using a wire brush. Remove the loosened deposit with an industrial vacuum cleaner or blow it away. You must replace all damaged and rotten planks.

Step 2: Apply PolyGrip Decking Strips

PolyGrip Decking Strips are pre-drilled, so you can mount them directly on the surface. Place the PolyGrip Decking Strips in the correct position and drill them in place with a cordless drill bit and stainless steel screws. We recommend securing the PolyGrip Decking Strips in place with Stainless steel parkers 3.5 x 25mm. Available in color at GripFactory. We do not recommend installing the PolyGrip Decking Strips using standard screws, as these will rust and stain the wood. In addition, standard screws can protrude and result in a tripping hazard.

GRIPFACTORY APPLICATION SERVICE

Are you unable to find a solution or do you have questions? Then contact the GripFactory Service Desk (+31 348 -20 3000). For an additional cost you can have GripFactory PolyGrip products applied by a certified applicator.